



Operating Instructions Diaphragm Seal Piston Pressure Switches Type E1S/E1H/P1H/P1X/MPSP











1	Intended Applications	2
2	Safety Instructions	2
3	Standards	
4	Warranty/Guaranty	
5	Transport/Storage	
6	Installation/Commissioning	
7	Maintenance/Cleaning	7
8		

Barksdale

CONTROL PRODUCTS

Barksdale GmbH Dorn-Assenheimer Straße 27 D-61203 Reichelsheim

Phone: +49 (6035) 949-0

Fax: +49 (6035) 949-111 and 949-113

email: info@barksdale.de Internet: www.barksdale.de Art. No.: 923-0167 Index N, 26.08.2022

Specifications are subject to

changes without notice!





Intended Applications

The pressure switches are specifically applied for monitoring and controlling of operations using maximum and minimum pressures. A micro switch triggers an electrical signal when minimum or maximum pressure are reached.



DANGER

The switch may only be used in the specified fields of application (see type label).

The temperature has to be within the specified ranges, the pressure values and the electrical rating must not exceed the values specified.

Observe also the applicable national safety instructions for assembly, commissioning and operation of the switch.

The switch is not designed to be used as the only safety relevant element in pressurized systems according to PED 2014/68/EU.

Without special provisions/actions, pressure switches must not be used for pure gas or hydrogen applications.

Safety Instructions

The safety instructions are intended to protect the user from dangerous situations and/or material damage.

In the operating instructions the seriousness of the potential risk is designated by the following signal words:



DANGER

Refers to imminent danger to men.

Nonobservance may result in fatal injuries.



WARNING

Refers to a recognizable danger.

Nonobservance may result in fatal injuries, and destroy the equipment or plant parts.



2

CAUTION

Refers to a danger.

Nonobservance may result in light injuries and material damage to the equipment and/or to the plant.



IMPORTANT

Refers to important information essential to the user.



✓ Disposal

The equipment must be disposed of correctly in accordance with the local regulations for electric/electronic equipment.

The equipment must not be disposed of with the household garbage!

Standards

The standards applied during development, manufacture and configuration are listed in the CE conformity and manufacturer's declaration.

Warranty/Guaranty

Warranty

Our scope of delivery and services is governed by the legal warranties and warranty periods.

Terms of guaranty

We guaranty for function and material of the single- / dual- pressure switch under normal operating and maintenance conditions in accordance with the statutory provisions.

Loss of quaranty

The agreed guaranty period will expire in case of:

changes or modifications to the switch/housing/fitting

incorrect use,

incorrect installation or

incorrect handling or operation contrary to the provisions of these operating instructions.

No liability is assumed for any damage resulting therefrom, or any consequential damage.

Transport/Storage



CAUTION

Severe shock and vibrations should be avoided during transport. Storage should be dry and clean.





Installation/Commissioning



DANGER

Only install or uninstall the switch when deenergized (electrically and hydraulically/pneumatically).

Pressure connection and electrical connection must be carried out by trained or instructed personnel according to state-of-the-art standards.

The switch must only be installed in systems where the maximum pressure P_{max} is not exceeded (see type label).



CAUTION

Alternating pressure - vacuum applications are not authorized in switch types which are suitable for both vacuum and pressure applications.



WARNING

Pressure peaks and pressure shocks exceeding the maximum operating pressure are inadmissible.

The maximum operating pressure is the upper final value of the adjustable range or, if specified, the pressure indicated as maximum operating pressure. Exceeding the max. operating pressure affects the performance and the life span of the product and may damage it.

Pressure switches must be mounted vibrationless.



WARNING

Check the switch regularly for functioning.

If the switch does not work properly, stop operation immediately!

IMPORTANT

All pressure switches are tested for proper functioning before they leave the factory.

The factory proof pressures are stated on the type plate.

Contact Protection

The micro switches used are normally suitable for both direct and alternating current operation. Inductive, capacitive and lamp loads may, however, considerably reduce the life expectancy of a micro switch and, under extreme circumstances, even damage the contacts.

Depending on the application spark suppression and current limiting is recommended (see succeeding figures).




Fig. 1: Protection in case of capacitive R1: Protection against loads starting current rushes R2,R3: Protection against high discharge currents




Fig. 2: Lamp load provided with resistance in parallel or series connection to switch of condensators

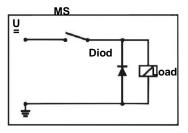


Fig. 3: Protection in case of continuous current and inductive load by recovery diode

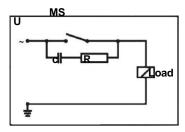


Fig. 4: Protection in case of alternating current and inductive load by RClink

Set point adjustment

IMPORTANT

Factory-Provided: pressure (temperature) switch point setting

We confirm for pressure (temperature) switches that have been factory set the setting will be detailed on the label name plate.

Warranty is not applicable for any changes that may occur due to transportation or installation. For critical applications we recommend the setting is checked and re-set if cecessary after installation and wirding of the pressure (temperature) switch.

In pressure switches, a displacement of the pressure sensing element occurs with a change in pressure. Following the displacement of the pressure sensing element operates a microswitch.

Upon delivery of the product, the set points are likely to be found in the middle of the adjustable range. On request, fix set points may be adjusted by our factory. In this event, the point will be indicated on the type plate or any separate plate, i = increasing, d = decreasing.

The set point is adjusted by turning the adjustment screw.

CRANE Barksdale, Inc./Barksdale GmbH

☐ IMPORTANT

To reach the adjustment screw for pressure switches with housing, remove the cover (see figure 7 ... 11).

Allow pressure switch to reach the desired switch pressure.

Turn adjustment screw clockwise or counterclockwise to actuate the micro switch.

IMPORTANT

Please consult the wiring diagram for the contact status at atmospheric pressure (see Fig. 5).

☐ IMPORTANT

Particularly important for small pressures! Set point adjustment must be performed in installation position.

Precise adjustment of set point to actuate on increasing pressure

Lower system pressure to 0 bar.

Increase pressure slowly and check if micro switch is actuated at desired switch pressure.

If necessary, readjust by turning the adjustment screw

Repeat preceding steps until microswitch operates at desired switch pressure.

Precise adjustment of set point to actuate on decreasing pressure

Increase pressure up to a point clearly above the desired switch pressure (at least, switch pressure plus max. hysteresis; not above max. operating pressure).

Lower pressure slowly and check if micro switch is actuated at desired switch pressure.

If necessary, readjust by turning the adjustment screw


Repeat preceding steps until microswitch operates at desired switch pressure.

Following the adjustment of all set points, each set point must be checked and, if necessary, be readjusted.

IMPORTANT

The adjustment of several set points occurs for each set point as specified above.

Wiring Code for all Types (Contact status at atm. pressure)



C = brown

NC = orange

NO = black

Fig. 5: Wiring Code

Use in Hazardous Locations

The pressure switches with optional EEx ia are approved for applications in hazardous locations for intrinsically safe circuits according to ATEX regulations. They must be operated with a switch amplifier (see Fig. 6).

They are only for use in an approved intrinsically safe circuit.

Units with explosion-proof enclosures must be operated in accordance with their approval.

Approval class and identification characteristics according to type plate information must always be observed. The models having light-alloy (aluminium) enclosures or enclosure parts must be protected against all impact or friction which can ignite the explosive atmosphere. EC-design approved types are marked with a label according to ATEX 94/9/EC.

The wiring between switch and Ex i isolation amplifier must meet the local safety requirements.

The customer must provide for a highly conductive connection between switch and grounding.

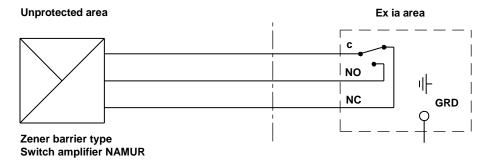


Fig. 6: Operation of pressure switches in intrinsically safe areas

Maintenance/Cleaning

Maintenance


The pressure switch is maintenance free. Checking the set points lies within the discretion of the user. The usual preventive maintenance work in accordance with the PED and ATEX guidelines must always be carried out.

Please note that small setpoint drifts may occur during the initial use of the switch (run-in period). To minimize the setpoint drift we can perform a run-in (ageing) process in our works on request. Larger or continuing setpoint drifts during the normal use of the switch may indicate that the measuring system is not used correctly within the specified limits, exceeding the design criteria or is worn-out. This might lead to metal fatigue of the measuring system and it therefore should be replaced before an ultimate rupture of the metal diaphragm might take place. Please consult your supplier or Barksdale directly for guidelines.

Technical Data

See data sheet


Dimensions in mm (inch)

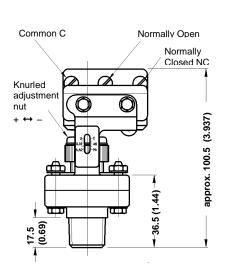

66.5 ±0.5 (2.62 ±0.02) Cable gland M20×1.5 (cable diameter 7...12 mm) 34 (1.34) max. 85 (3.346)

Diaphragm seal piston pressure switch type E1S-...

Fig. 8: Diaphragm seal piston pressure switch type E1H-...

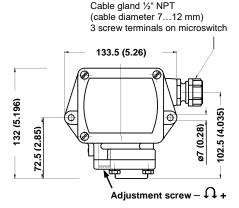

Diaphragm seal piston pressure switch type P1H-...

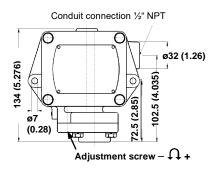


Fig. 10: Diaphragm seal piston pressure switch type P1X-...

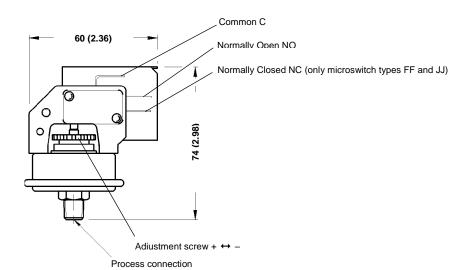


Fig. 11: Diaphragm seal piston pressure switch type MSPS-...

Adjustable Ranges Pressure Switch Type MSPS...

Pressure range code	Adjustable range [bar]		Max. operation pressure [bar]	Proof pressure [bar]	Max. hystere typ (end of	es
	Increasing pressure	Decreasing pressure		(short term)	EE, FF [bar]	DD, JJ [bar]
588	0.1 0.34	0.04 0.305	4.6	6.9	0.035	0.040
1588	0.2 1.00	0.10 0.900	4.6	6.9	0.055	0.068
500SS	1.2 6.80	0.70 6.300	6.8	10.0	0.540	0.620

Electrical Ratings Pressure Switch Type MSPS...

CRANE Barksdale, Inc./Barksdale GmbH A Subsidiary of Crane Co.

Micro switch	Special Characteristics	Volt AC 50/60 Hz	Ind. Load A	Res. Load A	Volt DC	Ind. Load A	Res. Load A	Notes
EE, FF	Microswitch	125	3	3				Medium
DD, JJ	with silver contacts	250	15	15	125 250	0.50 0.25	0.50 0.25	hysteresis; high AC loads

CRANE Barksdale, Inc./Barksdale GmbH A Subsidiary of Crane Co.



Adjustable Ranges Pressure Switches Type E1S.../E1H...

Pressure range code	Adjustable Differentia	~	Max. operating pressure [bar]	Proof pressure* [bar]	ty	esis of switch pes of range)
	Increasing pressure	Decreasing pressure		(short term)	H, GH [bar]	M, GM [bar]
Overpressure						
15	0.101.0	0.041.00	46	30/70	0.08	0.080
90	0.806.0	0.205.00	46	30/70	0.55	0.680
250	2.1017.0	0.7016.00	46	30/70	1.37	1.440
500	3.7034.0	1.7232.00	46	30/70	1.93	2.750
Vacuum						
VAC	-0.280.9	-0.200.82	2.0	-1.0	0.08	0.077

^{*} Note: designed for 70 bar proof pressure! For reasons of manufacturing technology only a proof pressure of 30 bar is applied!

Electrical Ratings Pressure Switch Type E1S.../E1H...

Micro switch	Special Characteristics	Volt AC 50/60 Hz	Ind. Load A	Res. Load A	Volt DC	Ind. Load A	Res. Load A	Notes
н	Microswitch with silver contacts	125 250	10 10	10 10	6 to 24	0,50	0,5	Small hysteresis; high AC / low DC loads
М	Microswitch with silver contacts	125 250	10 10	10 10	12 24 250	5,00 1,00 0,25	15,0 2,0 0,4	Medium hysteresis; high AC and DC loads
GH	Microswitch with gold plated	125	1	1	24	1,00	1,00	low change-back values
GM	contacts for low voltage and low current	30	0.1	0.1	30	0,10	0,10	Medium hysteresis

IMPORTANT

We recommend to use a prefuse of the maximum current rating from the table above according to the load switched.

We recommend gold plated contacts for all intrinsically safe and other applications with low voltage/power.

Adjustable Ranges Pressure Switches Type P1H.../P1X...

Pressure range code	Adjustable range [bar] Differential pressure Increasing Decreasing pressure		Max. operation pressure [bar]	Proof pressure [bar]	_	esis of switc nd of range)	h types
				(short term)	B [bar]	H, GH [bar]	K [bar]
30	0.12.1	0.032.0	91	137	0.14	0.06	0.17
85	0.46.0	0.205.8	91	137	0.50	0.17	0.58
340	0.823.4	0.4023.0	91	137	1.50	0.41	1.83
600	2.941.0	1.7040.0	91	137	2.00	1.17	2.42
1600	32.0107.0	28.0101.0	110	165	6.80	4.8	8.6

Electrical Ratings Pressure Switches Type P1H.../P1X...

Micro switch	Special Characteristics	Volt AC 50/60 Hz	Ind. Load A	Res. Load A	Volt DC	Ind. Load A	Res. Load A	Notes
н	Microswitch with silver contacts	125 250 480	10 10 3	10 10 3	6 to 24	0,50	0,5	Small hysteresis; high AC / low DC loads
GH	Microswitch with gold plated contacts for low voltage and low current	125	1	1	24	1,00	1,00	low change-back values
K, B	Microswitch with silver contacts K: with sealed plunger and stainless steel blade	125 250 480	10 10 3	10 10 3	12 24 250	5,00 1,00 0,25	15,0 2,0 0,4	Medium hysteresis; high AC and DC loads

We recommend to use a prefuse of the maximum current rating from the table above according to the load switched.

We recommend gold plated contacts for all intrinsically safe and other applications with low voltage/power.



Barksdale CONTROL PRODUCTS

Approval data for pressure switches type E1H with PLS with/or Connector ST1 **

Approval:

⟨€x⟩ II 1 G

Ex ia IIB T6 Ga

Certificate no.: TÜV 22 ATEX 322922 X, IECEX TUN 22.0011X

Permissible ambient

temperature:

-40 °C ≤ Ta ≤ +75 °C

Electrical data for Ui = 28 V Ii = 50 mA

intrinsically safe application:

Pi = 0,84 W Ci, Li = negligibly small

Standards applied: EN IEC 60079-0:2018/AC:2020-02, IEC 60079-

0:2017, IEC 60079-11:2011, EN 60079-11:2012

Approval data for pressure switches type P1H/P1X

Approval:

 $\langle E_{x} \rangle$

II 1 G Ex ia IIC T6 Ga

II 1 D Ex ia IIIC T₂₀₀100°C Da

Certificate no.: TÜV 22 ATEX 322922 X,

IECEx TUN 22.0011X -40 °C ≤ Ta ≤ +75 °C

Permissible ambient

temperature:

Ui = 28 V Ii = 50 mA

Electrical data for intrinsically safe application:

Pi = 0,84 W Ci, Li negligibly small

Standards applied: EN IEC 60079-0:2018/AC:2020-02. IEC 60079-0:2017.

IEC 60079-11:2011, EN 60079-11:2012

** E1H with metal fitting and metal lid:

Approval:

Ex | II 1

Ex ia IIC T6 Ga



CAUTION

Special conditions for use:

1.The size of the nameplate exceeds the permissible area and can therefore be electrostatically charged:

For IIC Ga uses the pressure switches have to be installed and used in such a way, that electrostatic charging from operation, maintenance and cleaning is excluded. For the use in explosive dust atmospheres process-related electrostatic charges, e.g. due to passing media have to be excluded.

2.All metallic parts of the devices have to be included in the local potential equalization.

3.The intrinsically safe circuit of the device is connected to the earth potential, therefore potential equalization has to exist in the entire area of the installation of the intrinsically safe circuit.

4.The housings of the devices consist of more than 10% aluminum, therefore in EPL Ga applications the installation has to be carried out in such a way, that ignition hazard due to impact or friction can be excluded.



CAUTION

No inadmissible heating can be expected that affect the maximum surface temperature. The maximum surface temperature lies only a small amount above the permissible ambient temperature during operation.

Operating life time

Normal expected service life (expressed in the number of cycles over the full adjustment range) is appr. 1 million for the pressure switch. This may be extended to 2.5 million cycles max. if only a part of the adjustment range is used (about 20%).

Switch sensor life may also be effected negatively by:

Media not compatible with the wetted materials.

Too high switch cycling speed or more than 20 cycles per minute.

System cycling pressure exceeding the top of the adjustable range.

The proof pressure must never be exceeded, otherwise the switch may be damaged. Careful selection of the pressure range can have a positive effect on the service life of the switch.